

FIX-A-LOO



3 YEAR WARRANTY

This warranty runs for three years from the date of purchase.

Our products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other loss or damage. You are also entitled to have the goods repaired if the goods fail to be of an acceptable quality and the failure does not amount to a major failure.

What is covered:

This warranty covers the product for domestic use only. The warranty covers any defects in materials or workmanship with the exception of the reasons stated below.

What is not covered:

This warranty does not cover wear and tear to working parts, misuse or abuse. It does not cover discolourations due to exposure or cleaning chemicals.

Claim procedure:

If you believe you have a legitimate claim, please contact FIX-A-TAP Australia via our website at www.fixatap.com.au/warranty to complete the warranty claim form. Alternatively you can contact our office on 02 9476 7400.

Any written correspondence should be sent to:

FIX-A-TAP Australia Pty Ltd,
PO Box 200,
Wahroonga NSW 2076

Please keep your receipt for proof of purchase.

PLUMBCONNECT PLUMBERS REGISTRY

Need a plumber?

To find a plumber in your area, consult our PlumbConnect Registry using the QR code or via our website:
www.fixatap.com.au/find-a-plumber



FIX-A-TAP® AUSTRALIA PTY LTD
The Ultimate Plumbing Solution
PO Box 200 Wahroonga NSW 2076
www.fixatap.com.au
Made in Malaysia
© 2021 FIX-A-TAP




A family
owned
Australian
business

Quality Assured Products
FIX-A-TAP has been providing Australians
with quality plumbing products since 1972.

ECONO TOILET SEAT

CODE: 235657


INSTALLATION INSTRUCTIONS

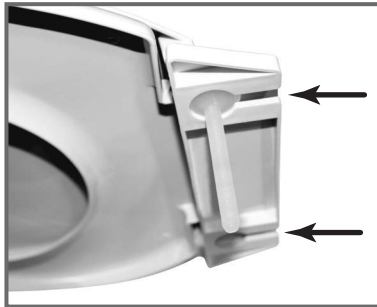

1. Slide the bolt heads into the base of the toilet seat.



2. Insert the bolts into the holes in the pan.

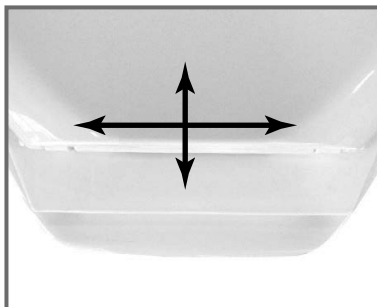

3. Align the seat to the centre by carefully moving to suit your pan.



4. Place the rubber washers over the toilet seat bolts from the underside of the pan, then add the nuts and tighten.

MAINTENANCE CLEANING INSTRUCTIONS

Clean with warm soapy water or a household detergent using a soft cloth or sponge. Do not use bleach or a harsh chemical based cleaner. Do not use a scourer as this may damage the finish.