

HYGENIX SEATING WASHER REPLACEMENT (OUTLET VALVE)

Turn off water, flush toilet, and open the cistern lid. Unscrew the black nut connecting the black cable. Pull apart the 2 red plugs to disconnect the battery box from the outlet valve.

The top part of the outlet valve can easily be removed without the need to remove the flush pipe. Simply rotate the cylindrical valve until the body is released from the base.

Replace the seating washer found at the base of the valve, and make sure that the new washer is lying flat against the valve.

Reinstall the outlet valve body, and lock into position by twisting until the valve body is firmly locked into the base. Reattach black cables by connecting with the arrows pointing towards each other, then tightening the black nut and push connect the 2 red plugs. Refit cistern lid, turn on water supply and check for leaks.

