


FIX-A-LOO®

MILLENNIUM HEADSEAL

INSTALLATION INSTRUCTIONS

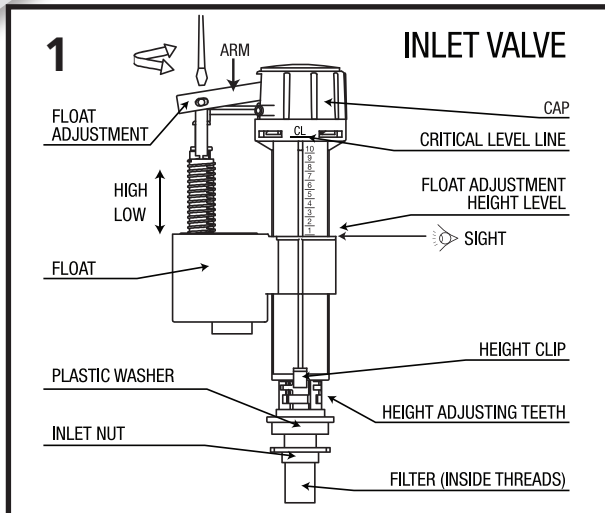

1. Turn off water supply and flush cistern until empty. Place a bucket under the inlet valve as some water may remain in the tank. Remove the inlet valve from the tank by unscrewing the water connector and the inlet nut.
2. Remove the black cap from the top of the inlet valve. This cap should be able to be pulled off.
3. The red float arm is attached to the valve with two prongs, gently ease the white sides apart far enough to release these prongs.
4. Remove the float adjustment from the lid of the valve by pulling it away from the white plastic arm component. Lower the float.
5. Twist the lid anti-clockwise to open and remove the white plastic headseal cover (found on the insider of the lid) with a pair of pliers.
6. The black rubber component is the headseal washer. Remove the worn washer, and replace with the new headseal washer.
7. Reassemble valve, reinstall, and turn on water supply. Check for leaks.

FIX-A-TAP®

AUSTRALIA PTY LTD

The Ultimate Plumbing Solution

PO Box 200 Wahroonga NSW Australia 2076

www.fixatap.com.au

